

OUTDOOR THEATER SYSTEMS




QuikScreen Pro

Instruction Booklet

System Checklist

Before you begin setting up, make sure you've received all your gear! Check each item as you unpack to ensure you've received your complete and correct system!

- ___ 1-Screen Frame
- ___ 1-Screen Black Fabric
- ___ 1-Screen Fabric White
- ___ 4-Twist Stakes
- ___ 4-15' Tie-Down Straps
- ___ 1-Media Case

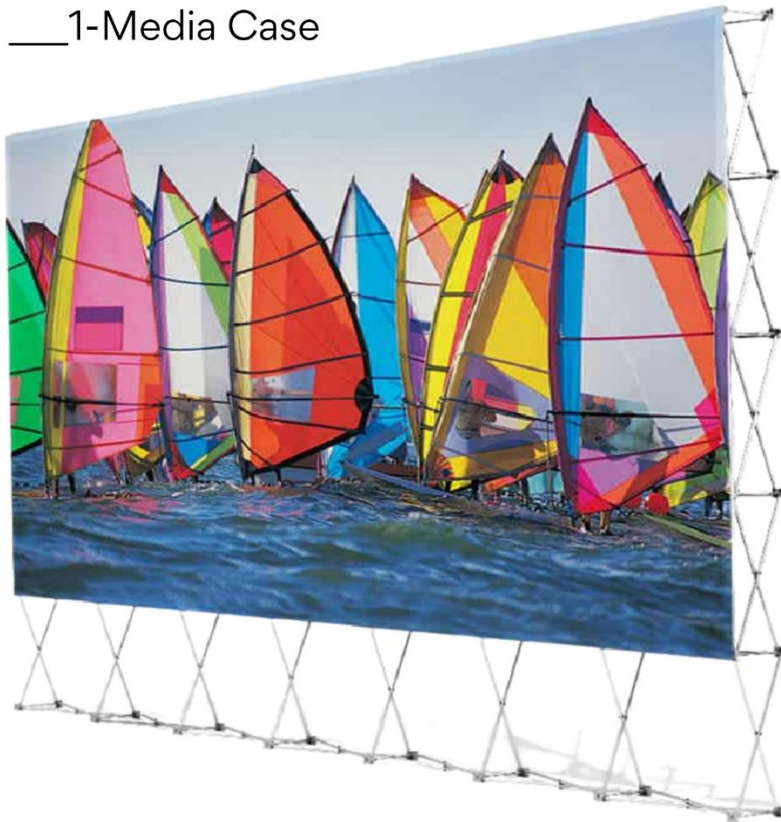

Setting Up Your Screen


1. Open the storage case and remove the screen frame. To expand the frame, you will need two people. One person on each side of the frame should grasp the 2 plastic joints on the edge in the center and walk backward pulling the frame open Velcro side up.
2. With the screen flat on the ground, snap down each plastic joint into place.
3. Attach the black screen to the frame by aligning their Velcro edges together. Unfold the screen in sections with two people, one on each side of the screen. Next, attach the white stretch screen on top of the black. Pull tight to ensure a smooth viewing surface!
4. While the screen is flat on the ground, estimate about 5 feet out to the side from each bottom corner. Insert 1 twist stake about 5 feet in front of that point and another about 5 feet behind. Repeat on the opposite side.
5. Hook each of the 4 tie-down strap hooks into the D-Rings at the top corners of the screen.
6. With 2 people on each side, walk the screen up onto its base until it's fully raised. Hook the opposite ends of the tie down straps into the ground twist stakes. Pull the ends of the tie down straps to tighten. Ta-Da! The screen is up!



=Twist Stakes



=Tie Down Straps

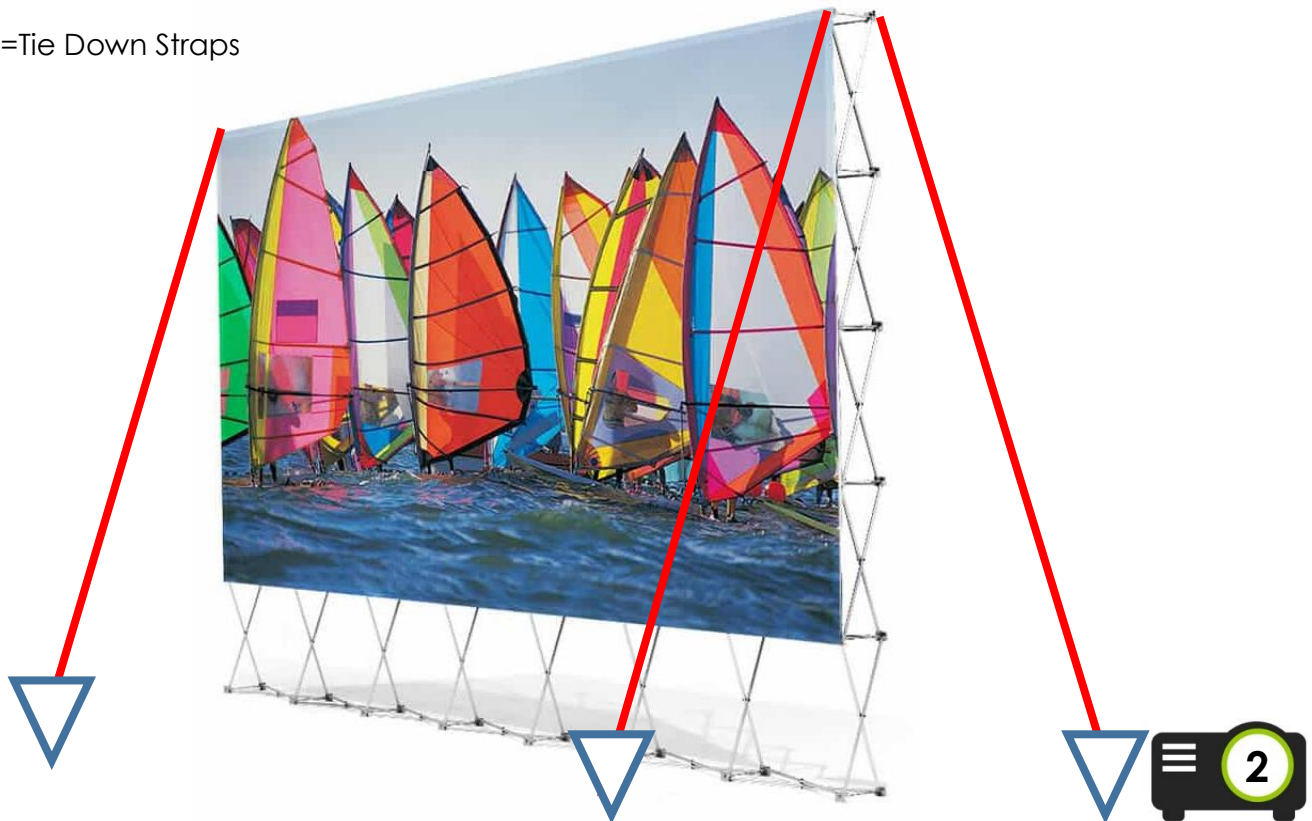



952-513-7764

www.outdoortheatersystem.com

info@outdoortheatersystem.com