

OUTDOOR THEATER SYSTEMS



SilverScreen Series

Instruction Booklet

System Checklist



Before you begin setting up, make sure you've received all your gear! Check each item as you unpack to ensure you've received your complete and correct system!



- ___ 1-Projector
- ___ 1-Amazon Fire Stick
- ___ 1-9' Electronic Screen
- ___ 2-Speaker Tripods
- ___ 1-Savi 8" Active Speaker
- ___ 1-Savi 8" Passive Speaker
- ___ 1-25' Speakon Cord
- ___ 1-25' RCA Cord
- ___ 1-3" 3.5mm to RCA Adapter
- ___ 1-25' Extension Cord
- ___ 1-3 Way Outlet Adapter
- ___ 1-Multi-Outlet Strip
- ___ 4-Twist Stakes
- ___ 4-15' Tie-Down Straps
- ___ 4-Twist Knobs
- ___ 2-Hex Bolts
- ___ 2-Eye Bolts
- ___ 2-Bungee Cords
- ___ 1-Gear Duffle Bag
- ___ 1-Flashlight



Setting Up Your Screen

We recommend having 2 people set up the SilverScreen System for ease and safety.

1. Open the tripod stands by loosening the lower knob and separate the legs until fully extended. Tighten the lower knob to secure. Repeat this step for the second stand and position it approximately 9 feet away from the first stand.
2. Attach one end of the screen into the top hole of the tripod stand using a hex bolt, and twist knob. Push the Hex bolt through the top hole of the screen and secure to the tripod with the twist knob. Do not fully tighten yet! Repeat this step for the other side.
3. Attach the Eye Bolt into the first hole of the tripod stand under the screen. Secure in place using a twist knob. Repeat this step for the other side.
4. Adjust the screen height by loosening the adjustment knob on the tripod stand. While holding the top tube of the stand, remove the safety lock pin. Raise the tube up a couple holes at a time and reinsert the safety lock pin. Tighten the knob to secure the tube. Repeat this step for the other side.
5. Now that the screen is at the desired height, fully tighten down the twist knobs securing the screen to the tripod stands.
6. From the center of the stand take one large step out and twist one stake into the ground 3 feet to your left and the other stake 3 feet to your right. Repeat this step for the other side.
7. Hook the first tie down strap into the eyebolt at the top of the stand and connect its other end to the rear twist stake. Connect the second tie down strap to the hook of the first strap and connect the bottom end to the front tie down stake. Pull straps to tighten. Repeat this step for the other side.
8. Attach the active speaker to the tripod stand on the right side. There is a hole in the bottom of each speaker that will mount on top of the tripod stand. Tighten the knob on the back of the speaker to secure. Repeat this for the passive speaker on the left side. This will require the use of a step stool or ladder to mount the speakers.
9. Plug in the screen power cord into the 3-way plug adaptor, then plug the 3-way plug adaptor into the extension cord. Plug in the extension cord and lower the screen.
10. Secure the bottom of the screen by attaching a bungee cord to the screen's bottom eyelet and wrapping it around the base of the tripod. Repeat this step for the other side.




Setting Up Your Screen



=Twist Stakes



=Tie Down Straps

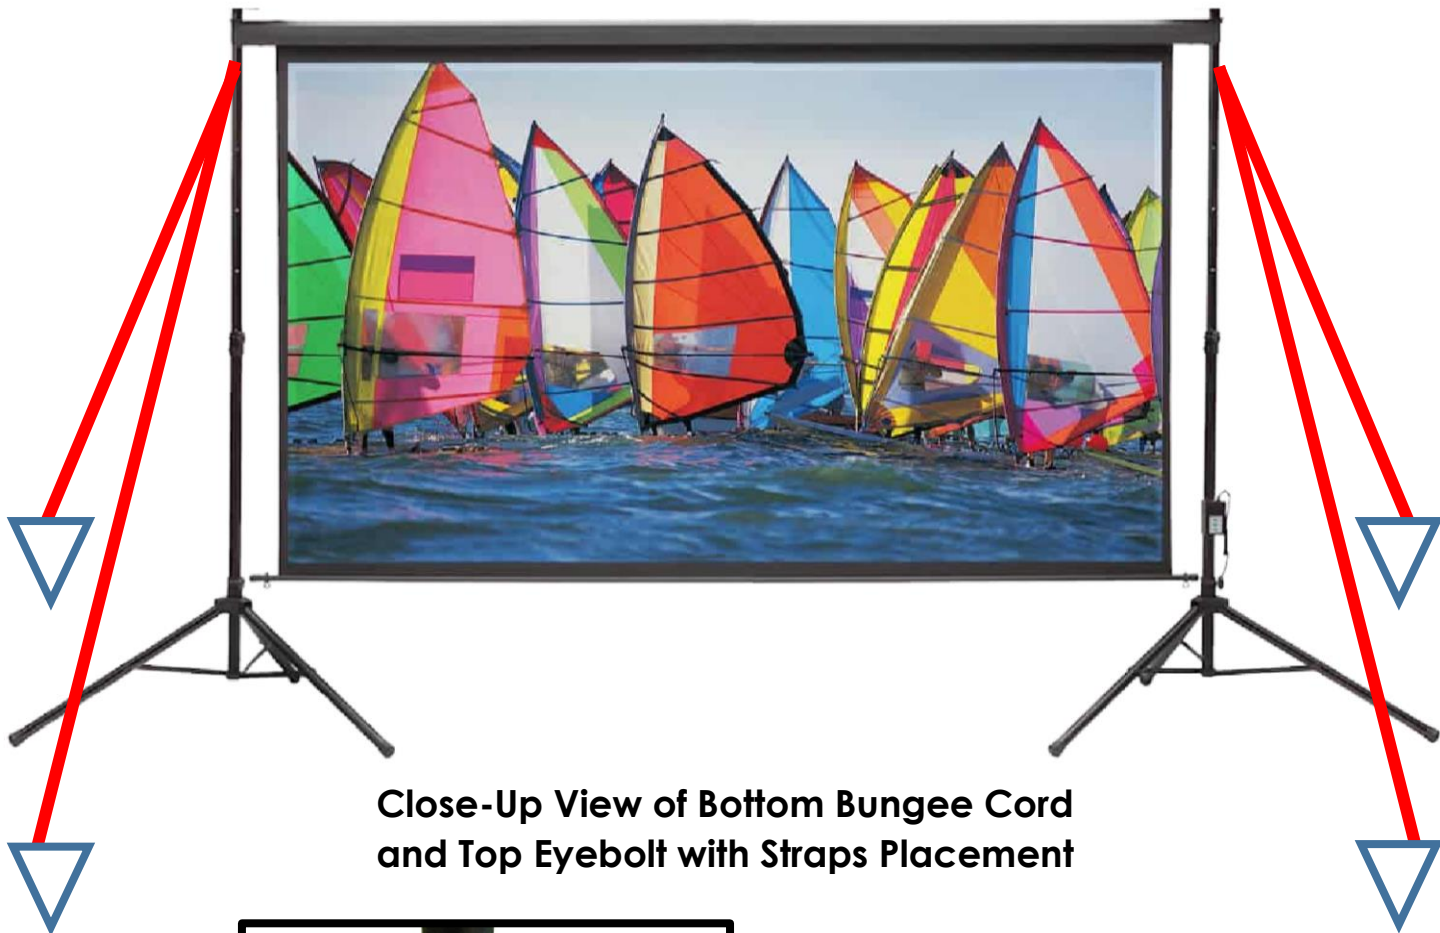

Close-Up View of Bottom Bungee Cord and Top Eyebolt with Straps Placement



Setting Up Your Speakers

We recommend having 2 people and a step ladder to set up the Speakers for ease and safety.

1. Attach the active speaker to a tripod stand. There is a hole in the bottom of each speaker that will mount on top of the tripod. Secure it in place by tightening the knob on the back of the speaker. If the speaker does not fit on the tripod stand easily, make sure the knob is fully loosened. Repeat this for the passive speaker on the same side.
2. Plug the power cord into the back of the active speaker. Plug the other end into the 3-way plug adaptor. Now, plug the 1/4" metal connector end of the speaker cable into the output that is labeled "Speaker Out". Run the other end of the cable to the passive speaker and push and twist the blue plastic connector to lock into place in the port labeled "Input".
3. Take the RCA cord and plug it into the "Line In" port on the back of the active speaker.
4. Run the end of the extension cord back to your projection station along with the RCA cord about 10-15 feet in the front center of the screen and plug the extension cord into the outlet strip. Speakers are ready to go! (Photo on next page)


Setting Up Your Projector Station

1. Set up a small table about 10-15 feet centered in front of the screen. You may have to adjust the distance slightly depending on the type of media you are projecting and the screen size you have. You can also use the projector's zoom, focus, and keystone controls to fine tune the projection.
2. Place the projector on the case and plug in its power cord. Connect the Amazon Fire Stick (or other media source) to one of the HDMI Inputs of the back of the projector.
3. Connect the RCA cord to the 3.5mm adaptor and plug in the adaptor to the headphone jack on the projector.
4. Plug the Projector and Amazon Fire Stick to the Multi-Outlet Strip and power up! Your system is ready to use!



System Diagram

View the below system schematic to better understand ideal component placement. This is the recommended set-up however, the system is not limited to only this specifically.

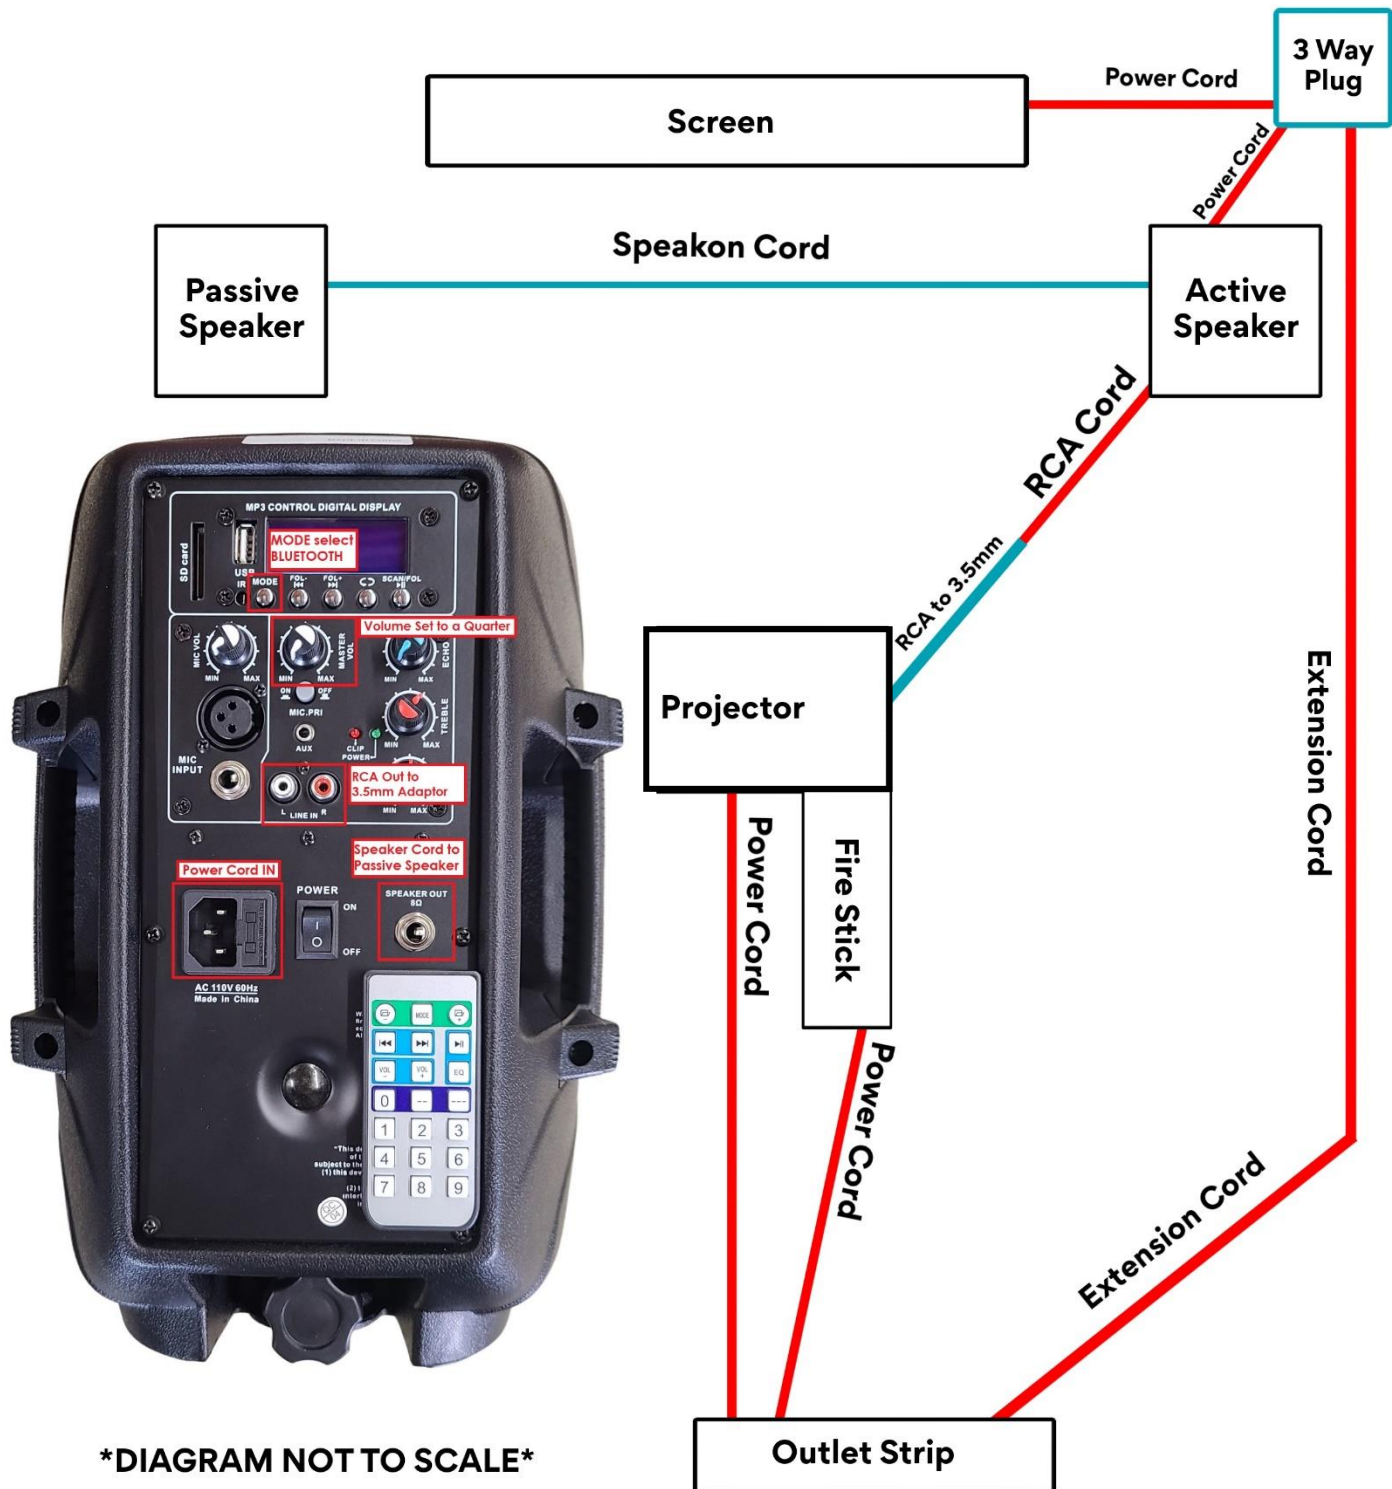

Run Into Trouble?

Read These Super Helpful Hints!

Volume Controls

There are 2 ways to control the volume on your system! We've found this is the best place to start! We don't typically recommend using the projector or speaker remotes. Instead, use the back of your active speaker as your main volume control.

1. Make sure the volume is all the way up on the projector! The sound leaves the projector and goes out to the speakers. So, if you don't have sound, it's probably down all the way on the projector.
2. Set your speaker volume to a quarter on the back of the active speaker to start. You can always adjust it later but it's best to start there, so you aren't startled by the sound! You can always crank it up!

Speaker Mode Settings

The speakers have 2 "Modes", "Bluetooth" and "FM Radio". Keep it set to "Bluetooth". Even though the speakers are hard-wired that is the correct setting. The speakers know to bypass searching for a Bluetooth signal if you don't have any devices paired to it. It will default to the "Line In" automatically.

Amazon Fire Stick

We recommend you set Up your Fire Stick beforehand inside on a TV. Log Into all your apps and connect to your Wi-Fi so it's ready to go when you want to stream content!

Using Other Media Sources

You can use any media that connects with and HDMI cord! Try out video game systems, laptops, phones, cable, anything!

Check us out on our website or social media for more helpful videos and downloads!



OUTDOOR THEATER SYSTEMS

952-513-7764

www.outdoortheatersistem.com

info@outdoortheatersistem.com