

OUTDOOR THEATER SYSTEMS



Starter Series

Instruction Booklet

System Checklist



Before you begin setting up, make sure you've received all your gear! Check each item as you unpack to ensure you've received your complete and correct system!



___1-Mini Savi Projector



___1-Screen Fabric and Frame



___1-Tripod



___2-Savi Mini Speakers



___2- Twist Stakes



___2-15' Tie Down Straps



___1- Carrying Case

___1-Flashlight




Setting Up Your Screen

1. expand the frame, you will need two people. One person on each side of the frame should grasp the 2 plastic joints on the edge in the center and walk backward pulling the frame open Velcro side up.
2. With the screen flat on the ground, snap down each plastic joint into place.
3. Attach the black screen to the frame by aligning their Velcro edges together. Unfold the screen in sections with two people, one on each side of the screen. Next, attach the white stretch screen on top of the black. Pull tight to ensure a smooth viewing surface!
4. While the screen is flat on the ground, estimate about 5 feet out to the side from each bottom corner. Insert 1 twist stake about 3 feet out from that point.
5. Hook each of the tie-down strap hooks into the D-Rings at the top corners of the screen.
6. With 2 people on each side, walk the screen up onto its base until it's fully raised. Hook the opposite ends of the tie down straps into the ground twist stakes. Pull the ends of the tie down straps to tighten. Ta-Da! The screen is up!

Setting Up Your Projection Tripod

1. About 8 feet in front of the screen, open the tripod and extend the legs. Twist on the media tray. Adjust the height so the projector will be centered with the screen.
2. Place the projector and the speakers on the tripod tray.
3. Plug in the USB cord headphone jack from the speakers into the projector.
4. Plug the power cord from the projector into a nearby power source. Power it up and connect a media source! You're ready to go!

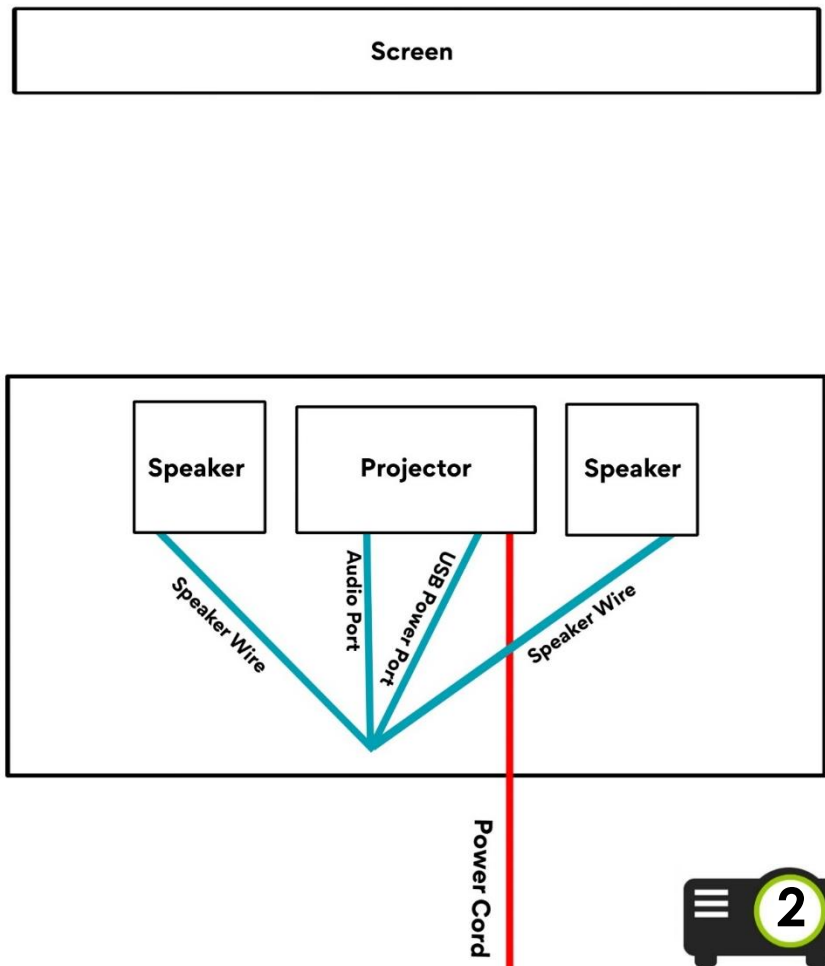

OUTDOOR THEATER SYSTEMS

7120 Shady Oak Road
Eden Prairie, MN 55344
952-513-7764

www.outdoortheatersystem.com
info@outdoortheatersystem.com